TR06

| Time zone = UTC | | Note |
|-------------------|-------------------------------------|--|
| Example | GMT,E/W,hours,minutes# | UTC/GMT - Coordinated Universal Time |
| SMS | GMT,E,0# | It is necessary to set UTC. GetPosition server is |
| Reply | OK | responsible for setting correct time for your application. |
| APN | | |
| Example | APN,APN's Name# | APN (access point name) – it depends on your provider |
| SMS | APN,internet# | of SIM card |
| Reply | OK | |
| DNS and port | | |
| Example | SERVER,1,DNS,Port,0# | |
| SMS | SERVER,1,gps.getposition.eu,9004,0# | |
| Reply | OK | |
| Tracking interval | | |
| Example | TIMER,time(second)# | Time range 10-18000 sec. |
| SMS | TIMER,10# | |
| Reply | OK | |
| GPRS | | |
| Example | GPRSON,1# | |
| SMS | GPRSON,1# | |
| Reply | OK | |